




# T-zer Beacon Anchor light install sheet

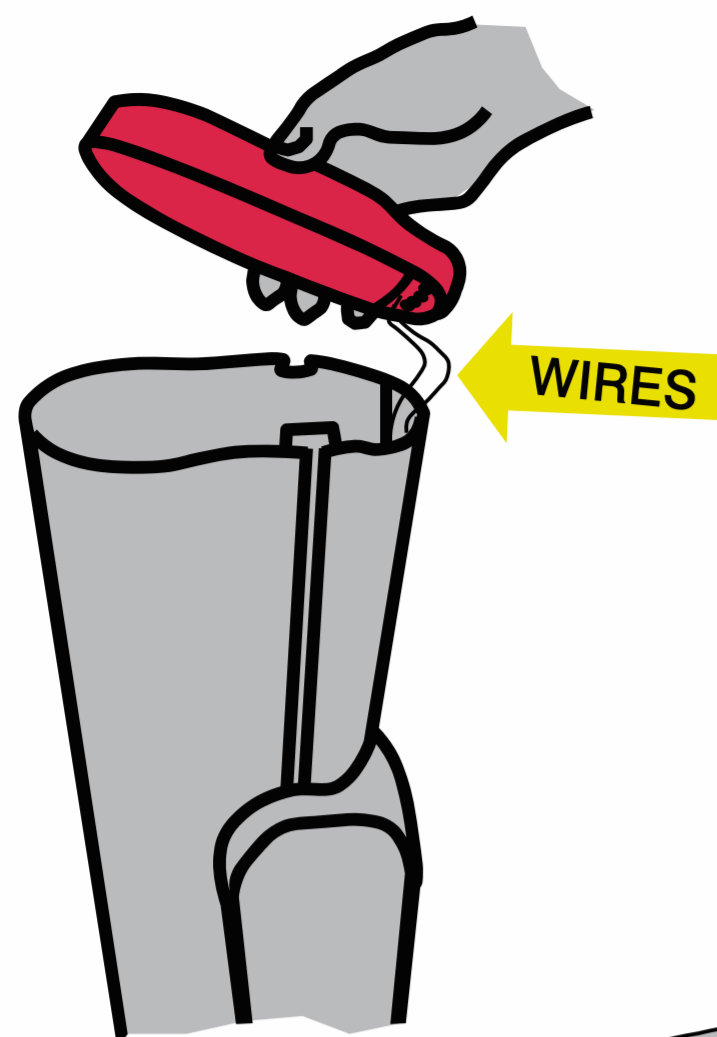


- 1 Carefully remove the plastic cap:**  
( Gen 3 Talons ) have **wires** that run to the factory worklight that's built into the cap, make sure not to damage or disconnect them.

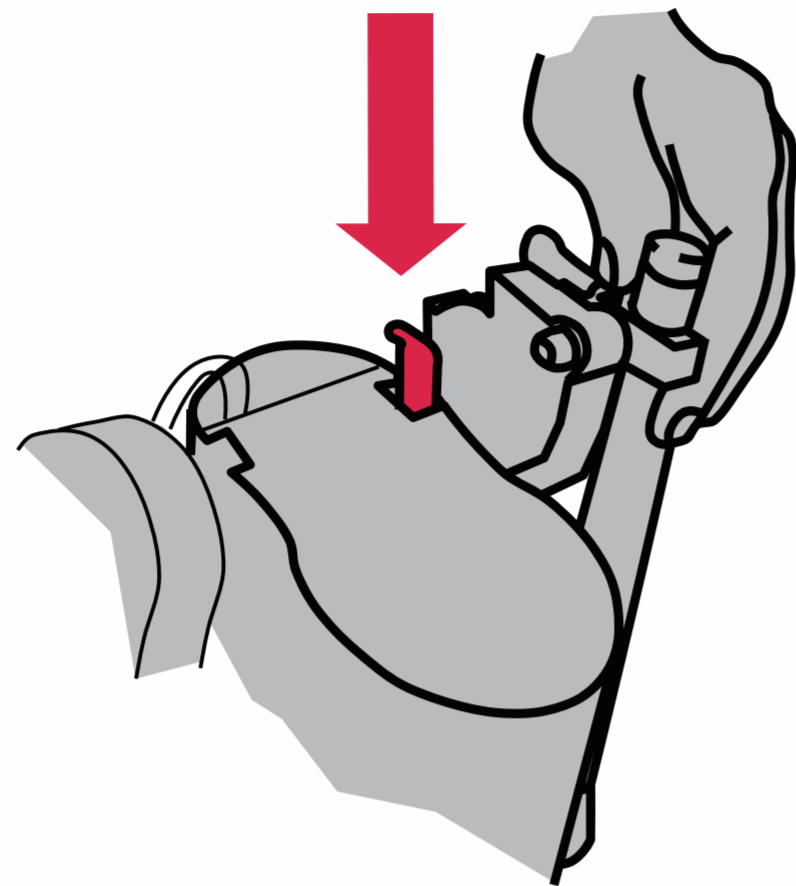


- 2 Insert Beacon's hanger bracket into the groove on Talons starboard side.**

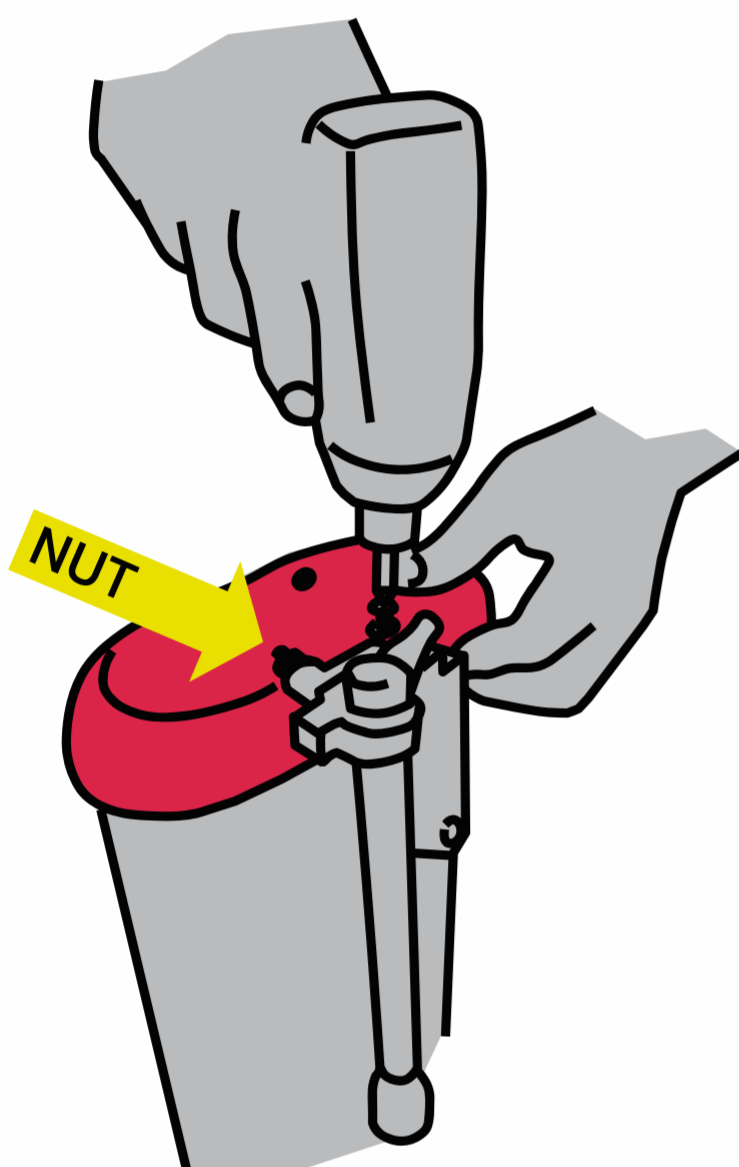

- 3 Reinstall Talon's plastic cap:**  
- Because the Beacon's hinge bolt **nut** is in the way, It will be necessary to lift the Beacon light up and then simultaneously replace the Talon cap while lowering the light back into place.

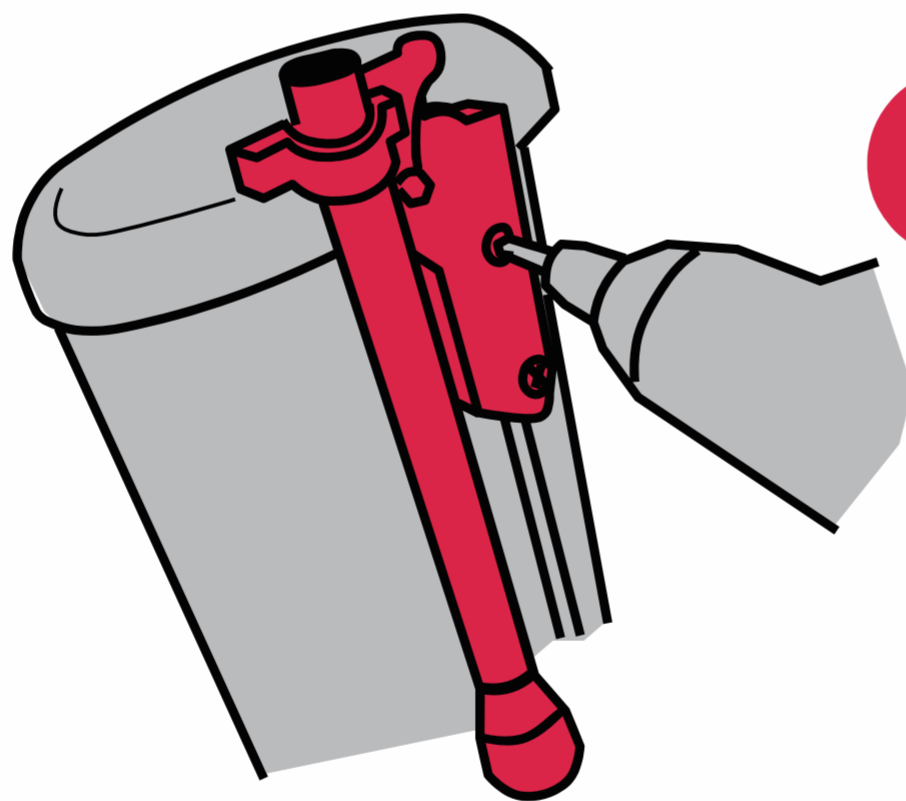

- 4 Make sure your light is straight up and down then tighten the hanger bracket screws.**

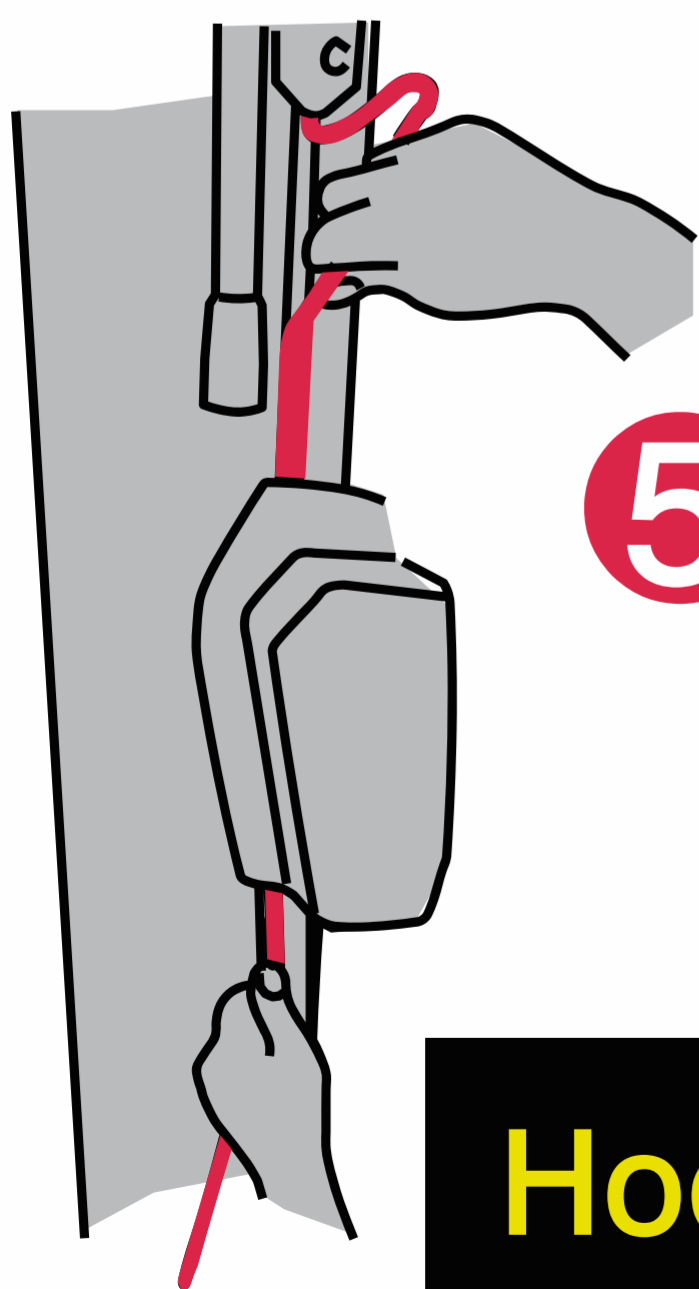

- 5 Using the clear plastic strip, that's attached to the end of the light's wire, run the wire in groove behind the Talon's motor cover. Run wire into your boat.**

**Hooking your wires up:** Since your Anchor light should be controlled from your dashboard, it's typical to hook this new anchor light into your boat's existing Anchor light wiring that is controlled by your boat's factory Anchor light switch system.