




T-zer Beacon Anchor light w/ Rigid install sheet

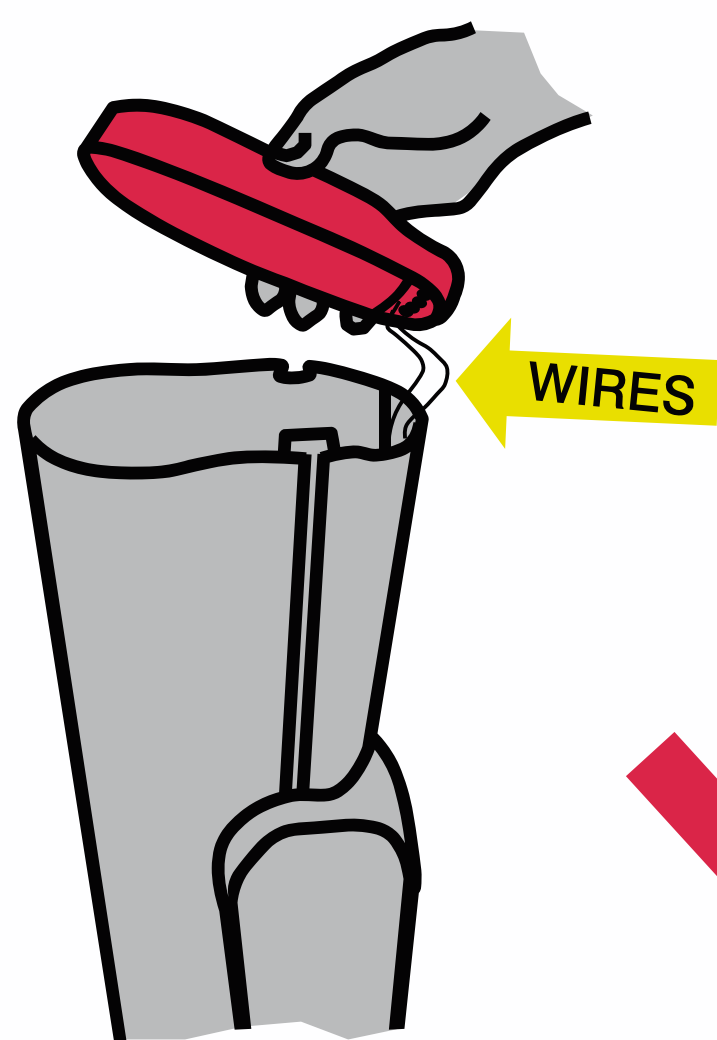


- 1** Carefully remove the plastic cap:
(Gen 3 Talons) have wires that run to the factory worklight that's built into the cap, make sure not to damage or disconnect them.

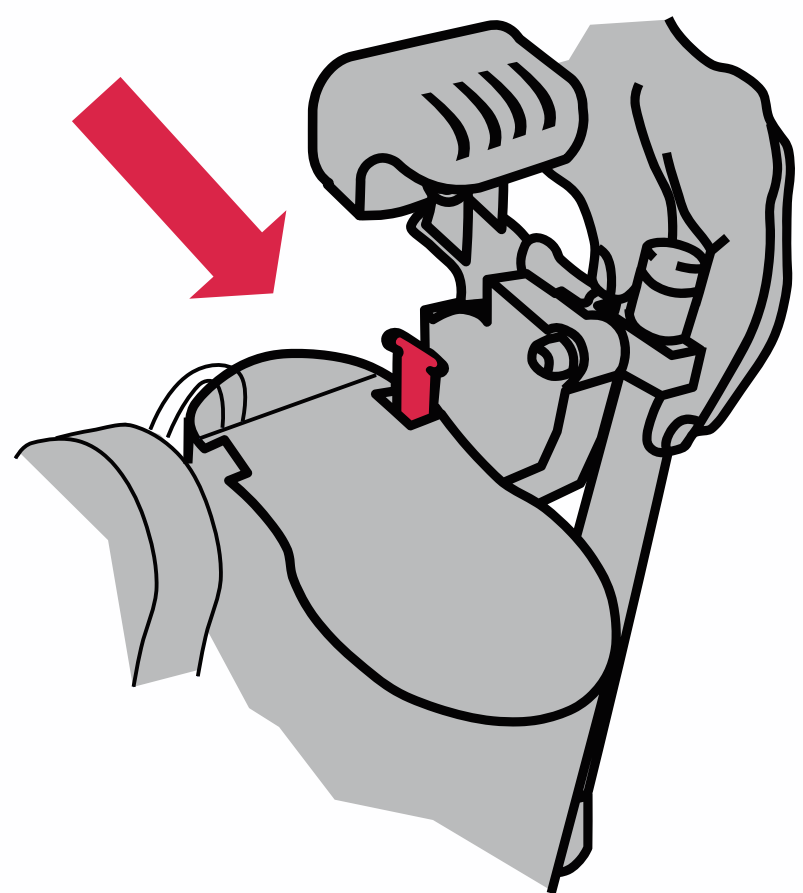


- 2** Insert Beacon's hanger bracket into the groove on the side of the Talon.

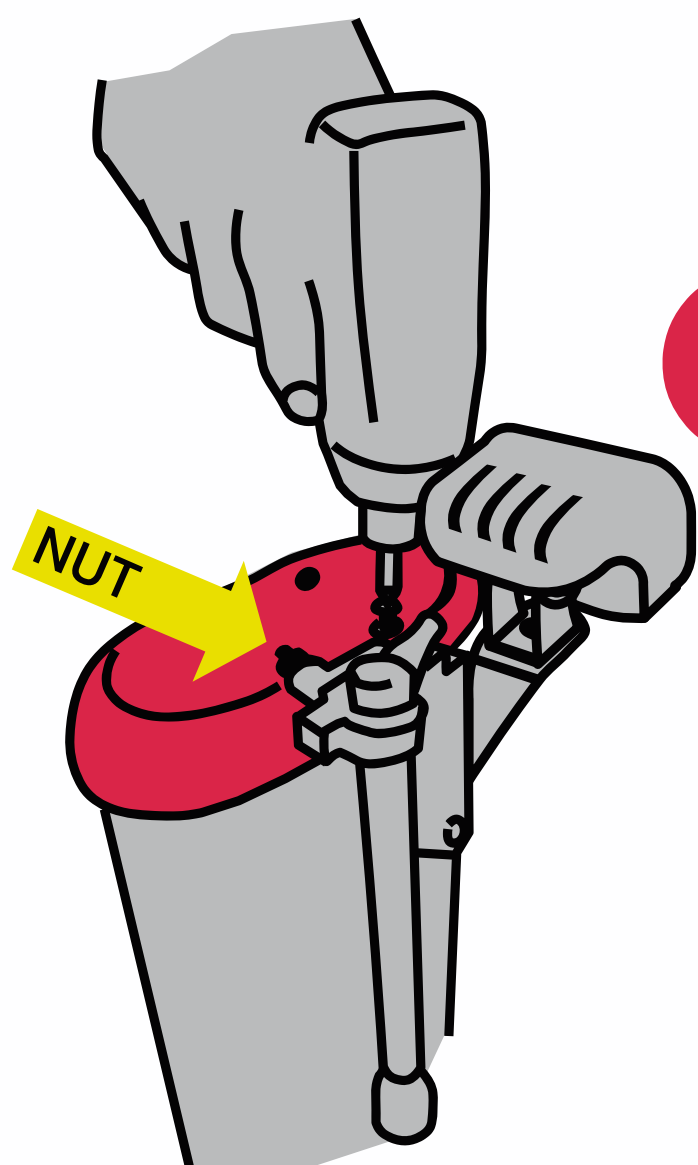

- 3** Reinstall Talon's plastic cap:
- Because the Beacon's hinge bolt nut is in the way, It will be necessary to lift the Beacon light up and then simultaneously replace the Talon cap while lowering the light back into place.

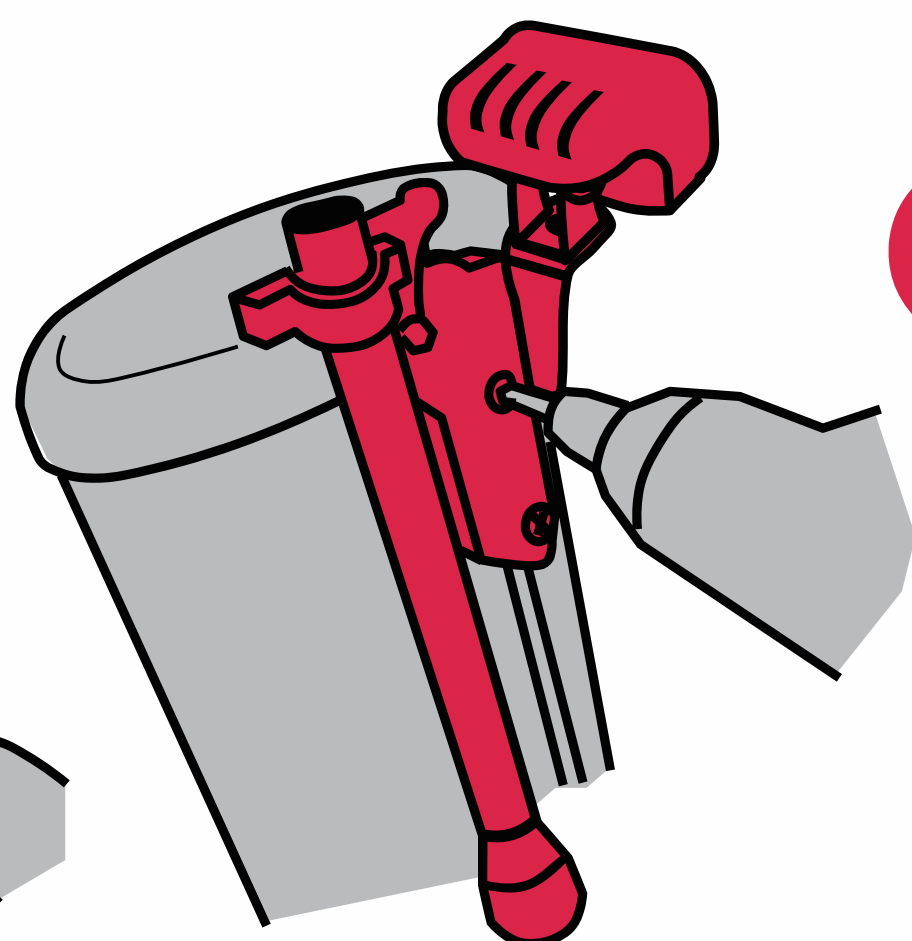

- 4** Make sure your light is straight up and down then tighten the hanger bracket screws.

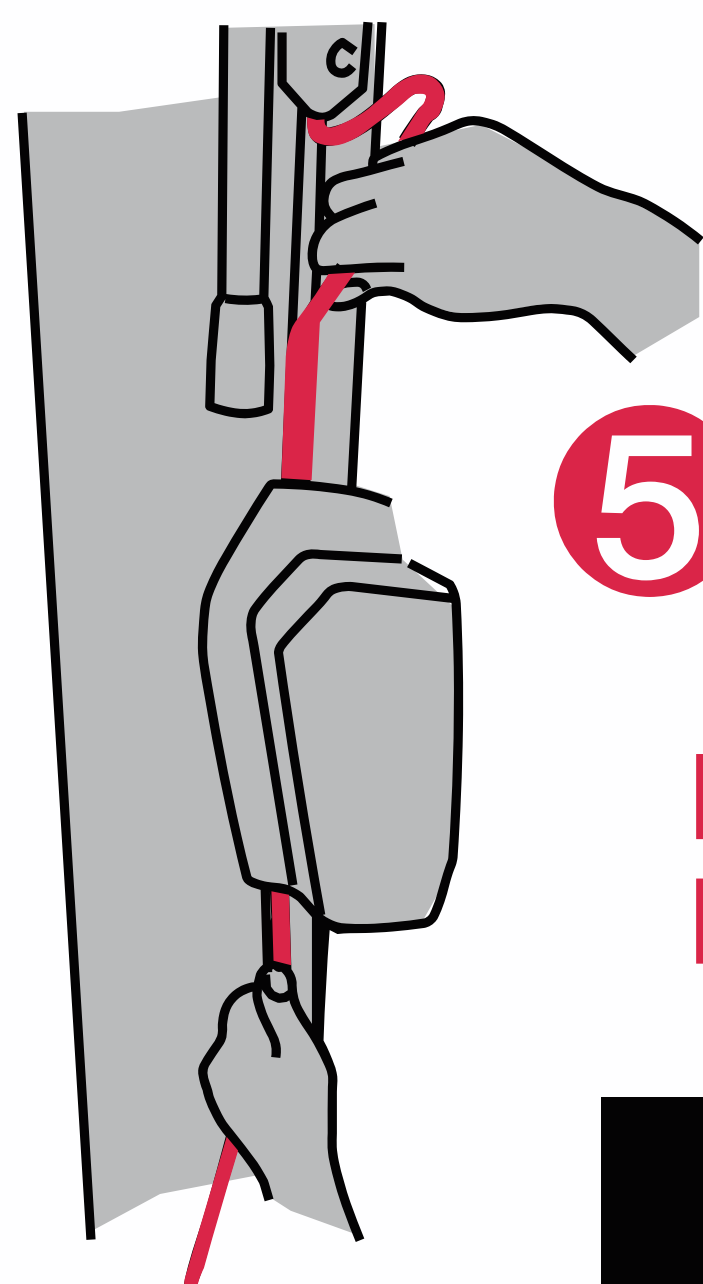

- 5** Using the clear plastic strip, that's attached to the end of the light's wires, run the wires in groove behind the Talon's motor cover. Run wire into your boat.

**Hooking your wires up:
See attached wiring instructions**