

T-zero light installation on GEN 2 Talons (mid-motor Talons w/o bluetooth)


1




remove the Talon's plastic cap

tuck the wire(s) into the groove above the motor

6

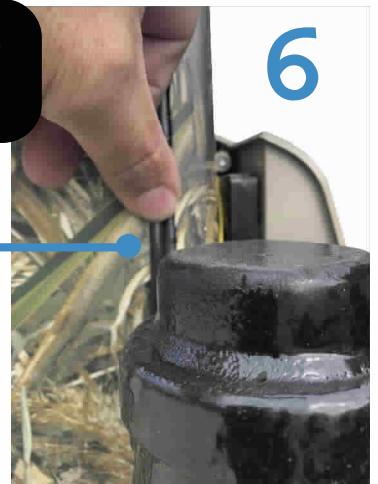


2

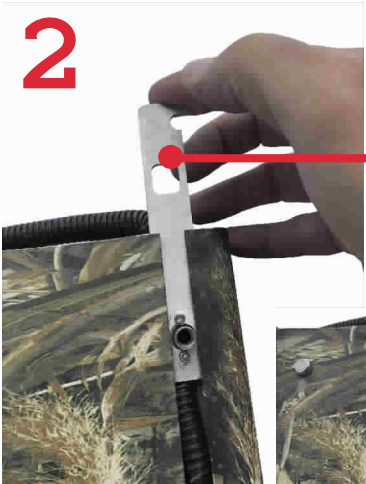

slide aluminum hanger into the wire groove running down the side of your Talon.

7

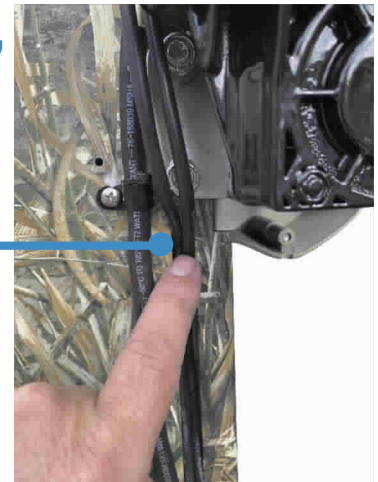

and below the motor

3

Take care not to snag the existing wire in groove


4



turn the 1/4" Phillips head screw into the barrel nut that's in the hanger bracket / reinstall the Talon's plastic cap now tighten hanger screw

reinstall the motor cover - take care not to pinch wiring

8

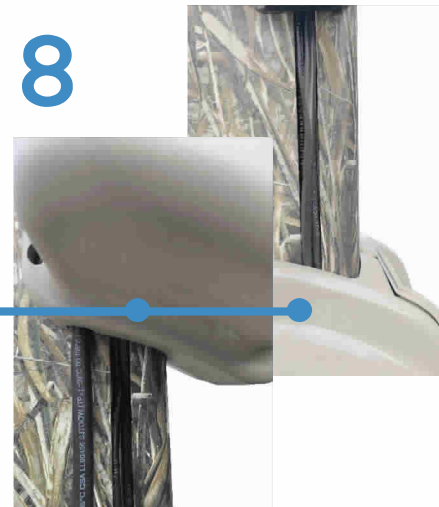

5



remove the Talon motor cover NOTE remove **only** the left cover **do not disturb** the control panel (there are small pins behind it that **will fall out**)

complete by running wire(s) into your boat and hooking up (use the wiring directions supplied w your light)

9

