




T-zer light installation on GEN 3 Talons (mid-motor Talons w/o bluetooth)

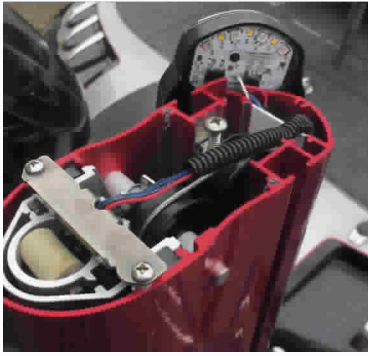

1 Remove the (2) Phillips screws that hold on the factory cap and set it aside. Be carefull.. do not damage the Minn Kota " work light " wires.

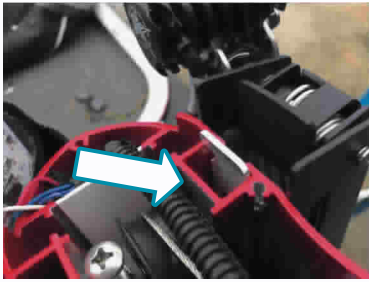


2 Slide the hanger bracket (that's the aluminum strip part on the backside of the T-zer light w/ the flange nut rivited to it) into the groove of the Talon until its all the way down to the stop (a little knob) at the top of hanging bracket.

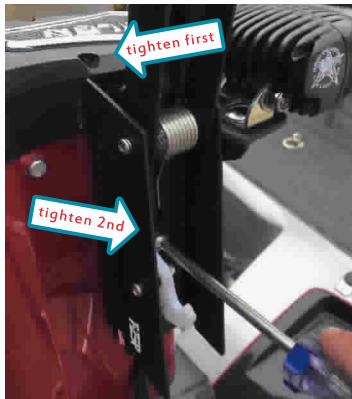

3 Re-attach the Talon factory cap to the Talon.
4 Open the Flip-up T-zer light and tighten the larger Phillips screw in the center of the Tzer light, this tightens the hanger bracket.



5 Run the wires down the groove using the clear plastic strips attached to the wire ends to feed them behind the Talon's motor shroud. (it is best if the wires go to the left side of the shroud screw that's in the groove at the bottom center of the shroud; this might take several tries but they will go. Removing the shroud is usually not necessary.)

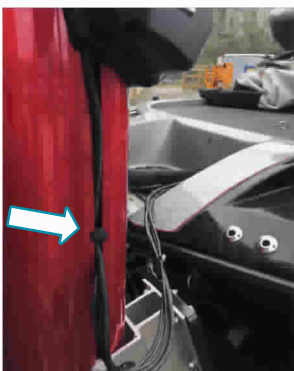

6 Run the wire down the Talon inside the groove - then into your boat.
(Minn Koto usually sends wire turn-clips with your Talon)

7 See wiring instructions attached