Install method - through wall
Fasteners - 1/2" threaded rod

On typical stud and siding or stud and EFIS wall

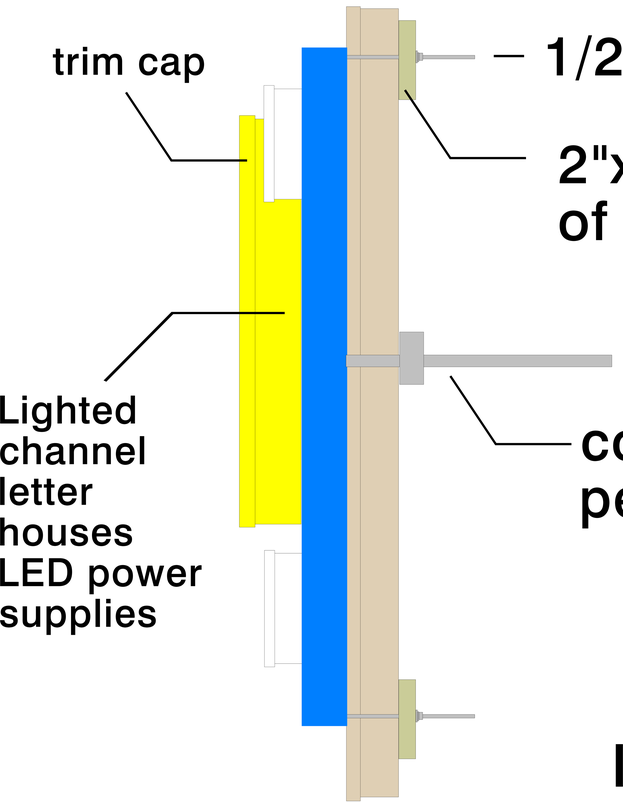

1/2" threaded rod turned into the nut embedded into the sign's frame

2"x6" pine board (treated if in a wet area) along top and bottom of sign to bridge across the wall studs

conduit housing 120v wiring to be connected to power source per code

If the wall is solid block or concrete - blocking may not be necessary

Electrical Hook Up: Sign requires 10 amp / 120v.