INSTALLING FARMERS HOME FURNITURE 7' HIGH X 17' WIDE STORE FRONT SIGN

Install method - through wall
Fasteners - 1/2" threaded rod

On typical stud and siding or stud and EFIS wall

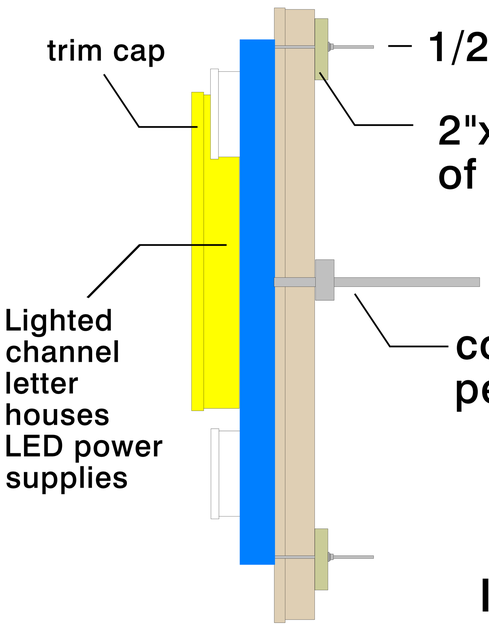

1/2" threaded rod turned into the nut embedded into the sign's frame

2"x6" pine board (treated if in a wet area) along top and bottom of sign to bridge across the wall studs

conduit housing 120v wiring to be connected to power source per code

If the wall is solid block or concrete - blocking may not be necessary

Electrical Hook Up: Sign requires 10 amp / 120v.

PLASTIC PYLON FACES

Example layout (4'x10')

Pylon plastic faces:

Types of plastic:
Faces up to 5' high - Pan-formed clear High Impact acrylic (Crylex)
Faces more than 5' high - Pan-formed clear Polycarbonate (Lexan)

Graphics - second surface
Colors - Farmers Furniture: white / Home: Spraylat 412 Buttercup or 3M Golden Yellow translucent vinyl
/ Background: translucent paint: custom mix to match Sherwin Williams 6962 Dazzle

BrandRite SIGN COMPANY INC.
803-533-7446
313 John C Calhoun Drive
Orangeburg SC 29115
Linford Oberholtzer
lin@brandritesign.com
Mobile 803-707-4512